

 
Appendix C – Parts (EETF102A)

External Parts for the TRANSTECH II-A Transmission Service System

Please refer to the part numbers below when ordering parts for the unit.

<u>Part #</u>	<u>Description</u>
010-0027	Wheel
010-0026	Wheel Hub cap
010-6000	Swivel caster
010-6001	Swivel caster with brake lock
010-5004	Hose bracket
010-5200	Overlay, Transtech (Version A)
010-5602	Adapter Box
010-6060	Reservoir cap
011-0031	Handle, steel
020-5331	Printed Circuit Board (Version A)
020-8043	Harness, power
020-1010	Harness, Internal
020-1600	Internal Light
040-0612	Screw, Allen Head, ¼-20 x ½ (Handle)
040-0613	Screw, Phillips, stainless steel 6-32 (Rear panel)
040-0623	Screw, Allen Head, 8-32 x 5/8 (Control Panel)
040-1200	Screw 5/8 php x #6 (for adapter box)
040-2000	Flat washer #6 (for adapter box)
040-2200	Threaded Standoff (for adapter box)
050-1000	Screen filter inline ½ MPT. Pp.
050-3001	Check valve, (disposal hose)
060-5810	Cap plug (handle)
080-0230	Female Quick Disconnect Couplers, 1/4", Ni
200-8611	Output/Return hose assembly
200-8612	Disposal hose assembly
200-8220	Operators Manual
200-8303	Quick Reference Card Transtech II-A
200-3100	Adapter Kit (standard)
200-3101	Adapter Kit (deluxe)

200-8653
NEW FLUID TANK
ASSEMBLY. (COMPLETE)

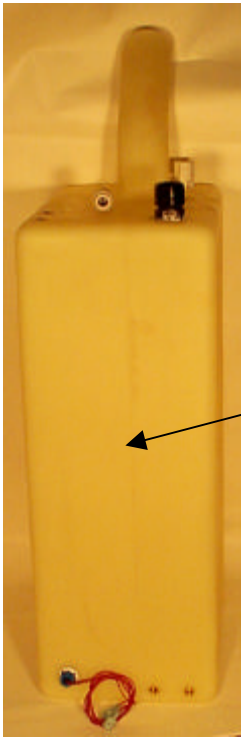

NOTE: All attached fittings are the same as Waste Fluid Tank components.

010-5802
New fluid tank 26- Qt.
Crosslink, Plastic.

200-8654
WASTE FLUID TANK
ASSEMBLY. (COMPLETE)

 
200-0043
Connector-male 3/8 x 1/4
Drilled through, 3/8" bore.

030-4602
Elbow fitting- male
3/8 x 1/4 NPT.

030-4002
Connector-male 1/2 x 3/4
Drilled through, 1/2" bore.

010-5803
Waste fluid tank 26- Qt.
Crosslink, Plastic.

050-2700
Level Switch 1/2" mount.

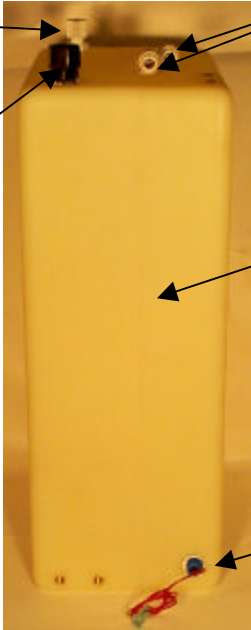

200-8657
FLUID PICK-UP TUBE ASSEMBLY



 
010-6102
1/2" Aluminum pick-up tube

030-4003
Connector fitting
1/2 x 1/2
Female thread.

050-1000
Strainer/Filter.

030-4402
Elbow fitting
1/2 x 1/2
Male thread.


200-8658
PRESSURE TRANSDUCER TUBE ASSEMBLY

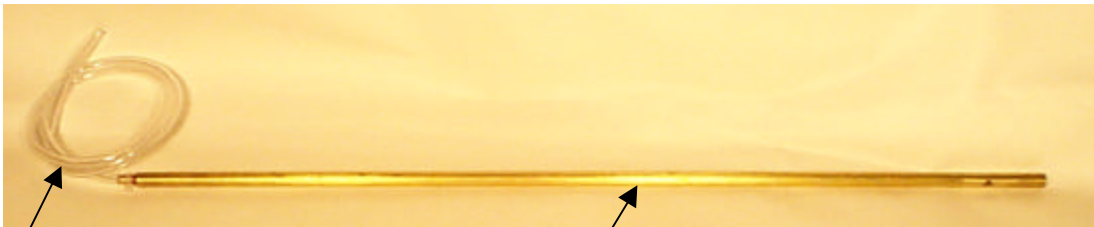

070-0401
Clear 1/4" hose
(Sold per ft.)

010-6103
Transducer Tube

 200-8643
CHECK VALVE ASSEMBLY

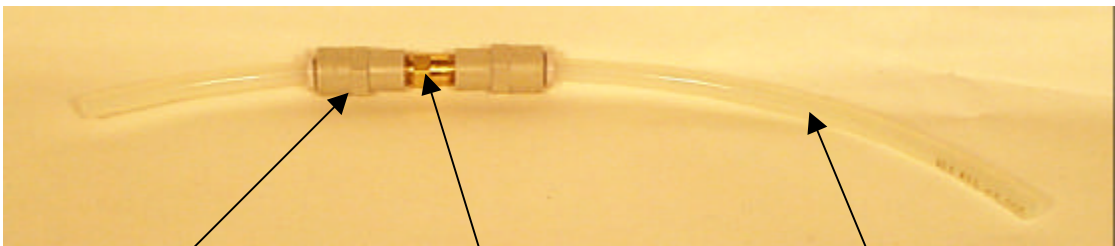


030-4603
Connector 3/8 x 3/8 NPT.
Female threads

050-3000
Check Valve 1/4" male
thread, brass, 9 psi
opening pressure

070-0086
3/8 Nylon Hose
(sold per ft.)

 200-8655
PRESSURE SWITCH ASSEMBLY.

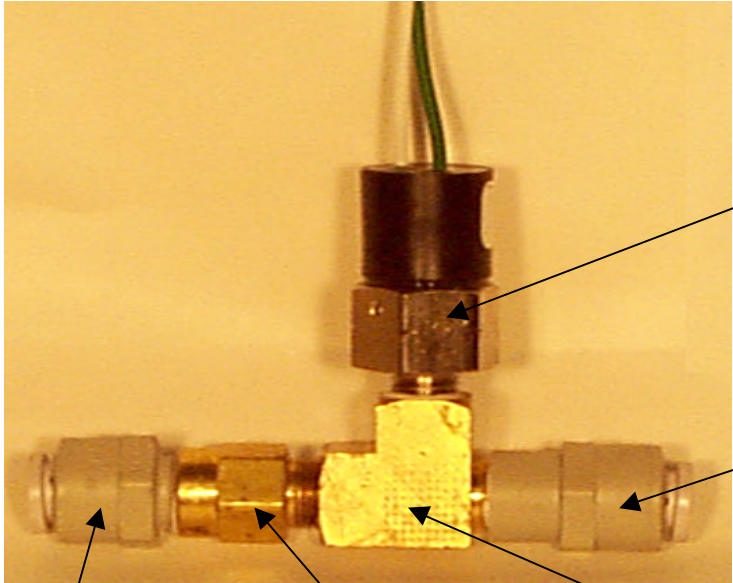

050-0016
Pressure Switch
1/4" Male threads

 
030-4603
Connector, 3/8 x 1/4
Female threads

030-4604
Connector, 3/8 x 1/4
Male threads

050-3006
Ported Check Valve
1/4 x 1/4 male/female
threads. brass.

030-1002
Tee fitting, brass
1/4 x 1/4 x 1/4


050-2300
MANIFOLD BLOCK ASSEMBLY
(Mounting plate not included)

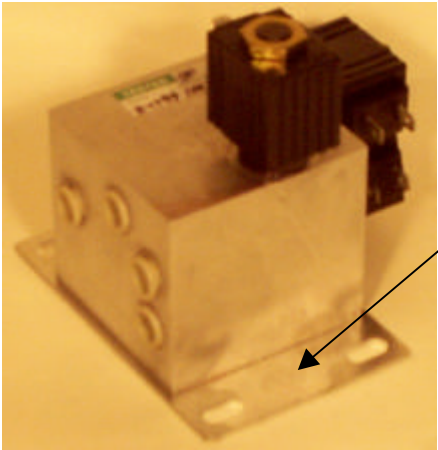

010-5412
Manifold Mounting Plate

040-1204
Screw, Flat head, 10-32 x 1/2
(Not shown)

 200-8652
PUMP ASSEMBLY

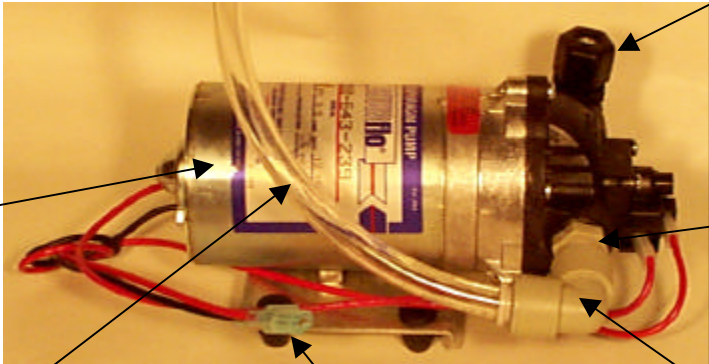

030-0216
Elbow fitting,
3/8 X 3/8
Male threads.

030-4601
connector fitting,
3/8 male threads x 1/2"
male connector.

050-2400
Shurflo Pump
W/mounting plate.

070-0090
Transparent hose,
1/2" (sold per ft.)

020-0042
Electrical Male connector.

030-4600
Elbow fitting, 1/2" x 1/2"
Hose connection .

020-8202
Electrical "T" tap connector.
(Not shown)

020-1600
Lamp assembly,
(Mounting bracket not sold separately)

 


NOTE: If components are equipped with a “Press-on” fitting, follow the next steps.

1. Press and hold hose to be removed firmly into the fitting.
2. Press the Compression ring into the body.
3. With compression ring pressed, pull the hose out of the fitting.

When installing; Hose needs to be inserted into the fitting approximately 3/4 in., (0.75”), to ensure proper seal onto the hose.

***PUSH INSERT FIRMLY INTO BODY, DEPRESS
COMPRESSION RING AGAINST BODY AND PULL HOSE.***

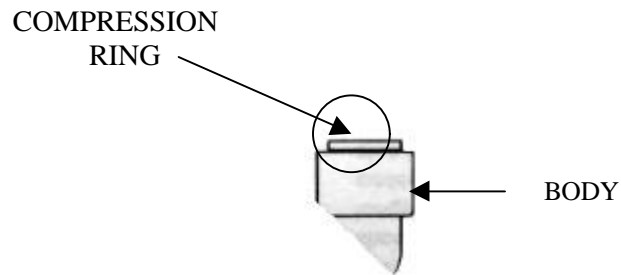

ORDERING PARTS

Parts for the unit may be ordered by calling
Customer Service, have your model and serial
numbers available:

in the U.S.
(714) 558-4822
(800) 841-8810

International:
CALL YOUR LOCAL
DISTRIBUTOR