



7. Spare parts

AirgoLift:

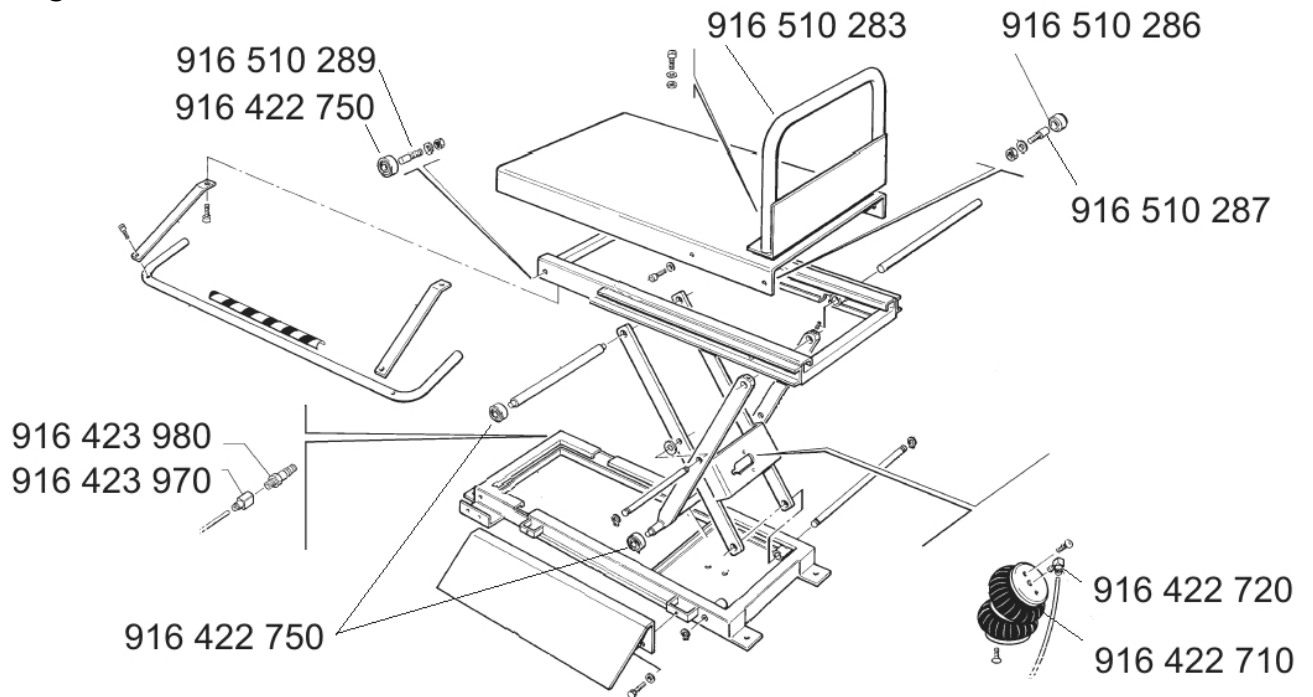

Part No.	Description	Notes
916 422 720	Compressed-Air Connection of Bellow	
916 422 710	Bellow	
916 422 750	Grooved Ball Bearing	
916 423 970	Connection	
916 423 980	Compressed-Air Connection of Lower Base Frame	
916 510 281	Holding Plate	
916 510 289	Headless Screw of Lower Base Plate	
916 510 283	Complete Handle.	
916 510 286	Roller	
916 510 287	Headless Screw of Support Plate.	

Control Unit

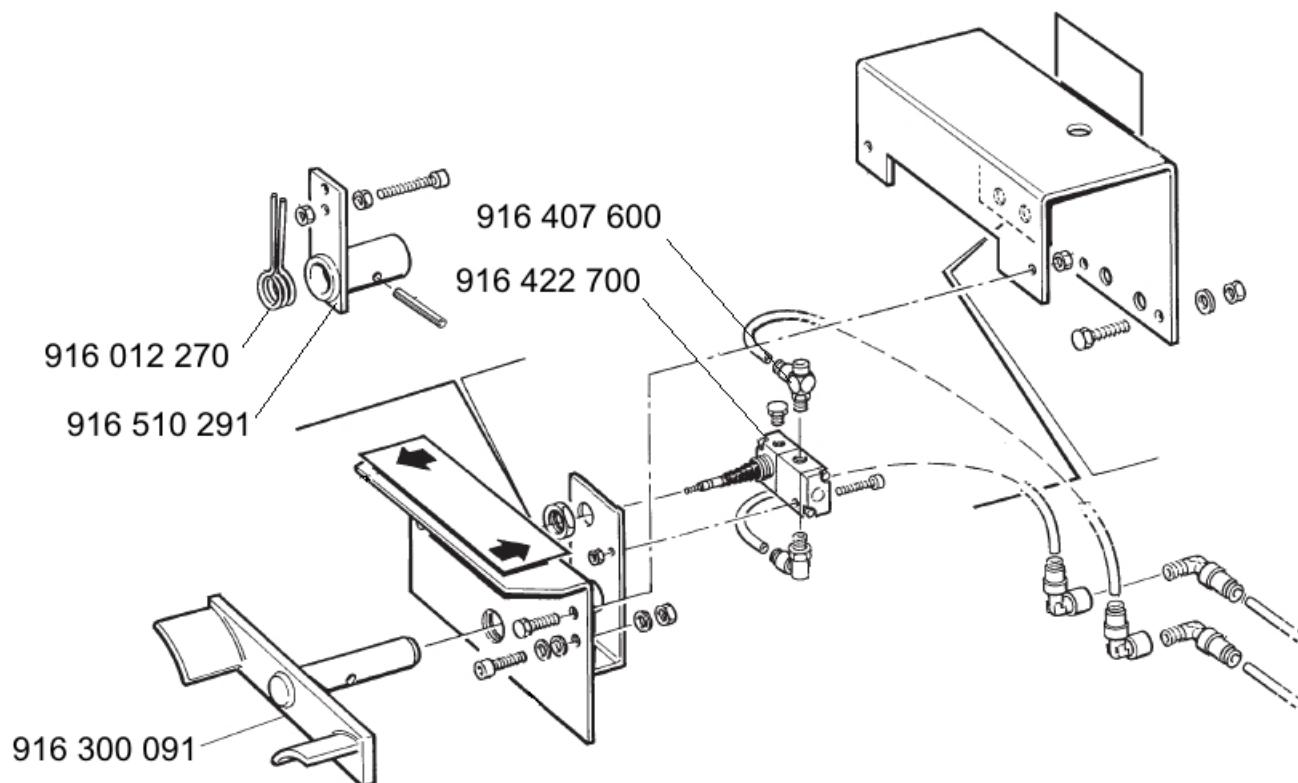

Part No.	Description	Notes
916 407 600	Compressed Air Connection of Steering Valve	
916 422 700	Steering Valve	
916 012 270	Torsion Spring	
916 510 291	Spacer	
916 300 091	Foot Pedal	